


REQUIRED TOOLS: Medium Philips Head Screw Driver, 7/16 Wrench, Rubber Hammer


1

Combining Base Ends

HARDWARE IDENTIFICATION
 (actual size):

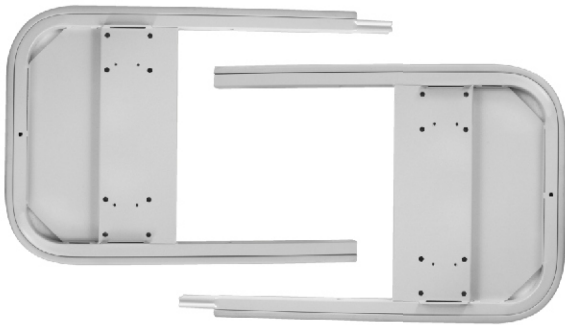

Place crimped end into non-crimped end

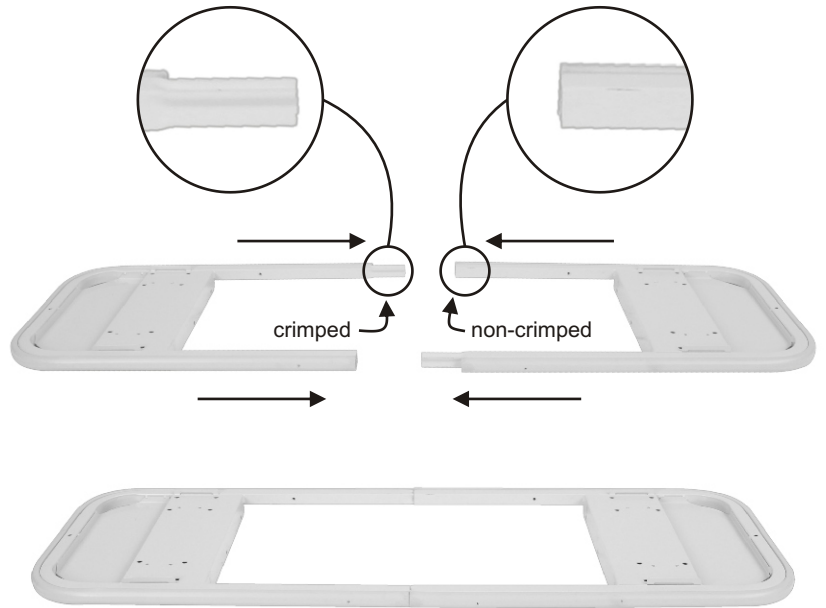

2


Attaching Base to Cabinet

HARDWARE IDENTIFICATION
 (actual size):

6=  1/4-20 x 3/4
 Phil Pan M/S Nickel


6=  5/8
 USS Flat Washer
 PLTD

6=  5/16-18
 Nylon Insert
 L/N Z

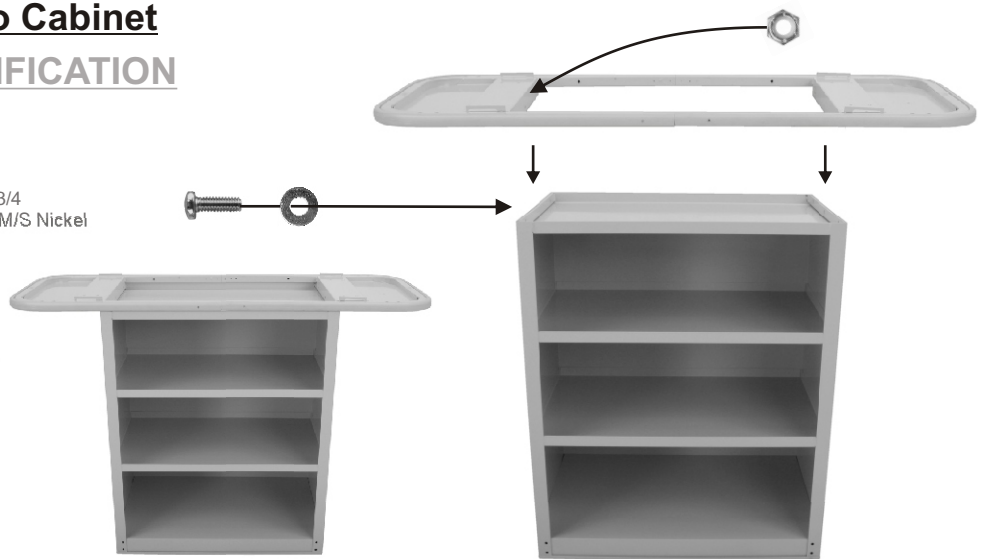

3 Attaching Wheels to Base

HARDWARE IDENTIFICATION (actual size):



Caster
Placement

Rigid Caster

Swivel Caster



4 Attaching Handles to Cabinet

HARDWARE IDENTIFICATION (actual size):

